

DIRECT DRIVE GAUGE
CALIBRATION IS ACCOMPLISHED with a SCREWDRIVER adjustment of the ADJUSTING SCREW located on the face of gauge. This gauge is capable of 150% over pressure WITHOUT DAMAGE. GAUGE ACCURACY is $\pm 2\%$ THE FIRST and LAST QUARTER of the SCALE and $\pm 1\%$ in the MIDDLE of the SCALE. CALIBRATION FREQUENCY: as required by FREQUENCY of USE, and ENVIRONMENTAL CONDITIONS. Gauge assembly MUST be returned to case after use to avoid DAMAGE.

