


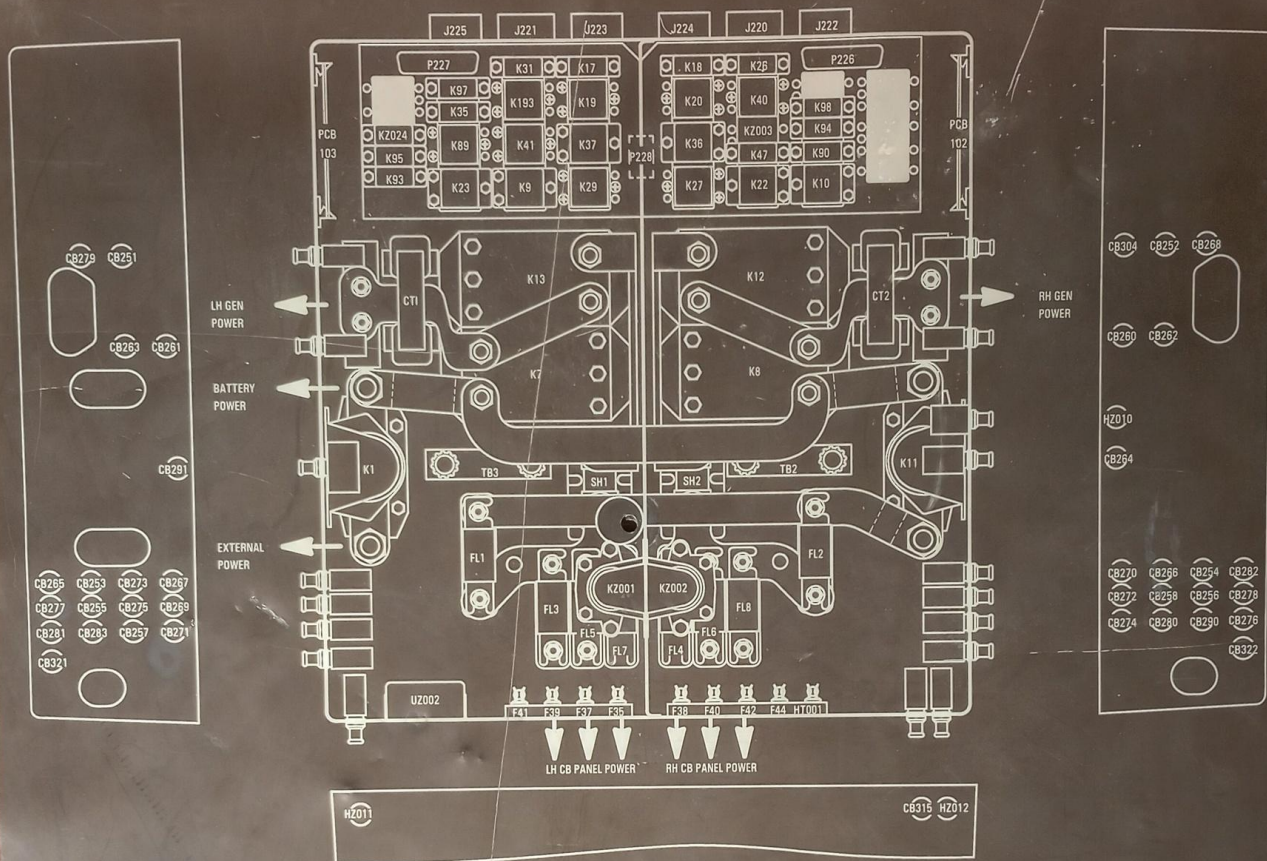

LEFT HAND J-BOX			
CB251 GENERATOR	F35		K35 BATTERY DISABLE RELAY
CB253 BOOST PUMP	F37		K37 FIREWALL SHUTOFF RELAY
CB255 LANDING LIGHT	F39	#2 IGNITOR POWER FUSE	K41 BLEED AIR TIME DELAY
CB257 OXYGEN SEAT BELT CHIMES	F41	#1 IGNITOR POWER FUSE	K49 GROUND IDLE TIME DELAY
CB261 RECOTAXI LIGHT			K83 LANDING LIGHT RELAY
CB263 TAIL PRESSURIZATION			K85 IGN FAILURE LIGHT RELAY
CB265 EMERGENCY LIGHTS	FL1	FUSE LIMITER	K97 TAIL FLOOD LIGHT RELAY
CB267 AMMETER	FL3	FUSE LIMITER	K183 TAIL PRESSURE TIME DELAY
CB269 AMMETER	FL5	FUSE LIMITER	K2001 RECOTAXI LIGHT RELAY
CB271 VOLT/METER	FL7	FUSE LIMITER	K2024 OVERVOLTAGE LOGIC RELAY
CB273 BUS SENSE			
CB275 INDIRECT LIGHTING			
CB277 BAGGAGE LIGHTS	H2011		
CB279 ANNUNCIATOR			
CB281 START LIGHT	K1	AUX POWER UNIT RELAY	PCB 103 PC BOARD
CB283 TAIL FLOOD LIGHTS	K7	START RELAY	P227 PC BOARD CONNECTOR
CB291 REFRESHMENTS	K9	AUXILIARY START RELAY	SH2 SHUNT
CB321 ENTERTAINMENT CENTER	K13	POWER RELAY	TB3 TERMINAL BOARD
	K17	BOOST PUMP RELAY	U2002 OVERVOLTAGE MONITOR
	K19	CROSSFEED TIME DELAY	
	K23	START CONTROL RELAY	
	K29	CROSSFEED TIME DELAY	
	K31	CROSSFEED BOOST RELAY	
CT1		GROUND FAULT TRANSFORMER	

RIGHT HAND J-BOX			
CB252 GENERATOR	F38		K36 FIREWALL SHUTOFF RELAY
CB254 BOOST PUMP	F40	FLOOD COOLING FUSE	K40 BLEED AIR TIME DELAY
CB256 LANDING LIGHT	F42	#2 IGNITOR POWER FUSE	K47 EMERGENCY POWER RELAY
CB258 CABIN LIGHTS	F44	#1 IGNITOR POWER FUSE	K90 RH LANDING LIGHT RELAY
CB260 EMERGENCY POWER			K98 FLOOD COOLING RELAY
CB262 IGNITOR POWER	FL2	FUSE LIMITER	K99 IGN FAILURE LIGHT RELAY
CB264 RECOTAXI LIGHT	FL4	FUSE LIMITER	K2002 RECOTAXI LIGHT RELAY
CB266 BUS SENSE	FL6	FUSE LIMITER	
CB268 ANNUNCIATOR	FL8	FUSE LIMITER	
CB270 AMMETER			
CB272 AMMETER			
CB274 VOLT/METER	HT001		
CB276 START LIGHT			
CB278 AVIONICS	H2010	EMERGENCY POWER BREAKER	
CB280 TOILET	H2012		
CB282 BATTERY VOLTAGE			
CB290			
CB304 FLOOD COOLING	K8	START RELAY	PCB 102 PC BOARD
CB315 KHF-950 COMM	K10	AUXILIARY START RELAY	P228 PC BOARD CONNECTOR
CB322 WING INSPECTION LIGHT	K11	BATTERY RELAY	P229 J-BOX INTERCONNECT
	K12	POWER RELAY	
	K18	BOOST PUMP RELAY	SH1 SHUNT
	K20	CROSSFEED TIME DELAY	TB2 TERMINAL BOARD
	K22	START CONTROL RELAY	
	K26	CROSSFEED BOOST RELAY	
	K27	CROSSFEED TIME DELAY	
CT2		GROUND FAULT TRANSFORMER	

CAUTION: EXTERNAL POWER AND BATTERY SHOULD BE DISCONNECTED BEFORE WORKING INSIDE BOX OR DISCONNECTING ANY PLUGS OR CABLES.

POWER J-BOX

SPARE LIMITERS INSIDE

8538354-6