


READ THESE INSTRUCTIONS before using Pyrometer

1. SINGLE RANGE PYROMETERS are made so that the pointer indicates Room Temperature (Ambient) at all times. **DO NOT ADJUST OR RESET POINTER** to try to correct for ROOM TEMPERATURE or THERMOCOUPLE COLD END. An accurate Bimetal in the meter **AUTOMATICALLY** corrects both. Do Not Readjust Pointer For Any Reason without first reading Instruction Booklet regarding Automatic Ambient Feature.
2. ATTACHED SENSOR PYROMETERS. If the sensor is removed, place a wire shunt across Terminals to damp meter. **NOTICE**—Paragraph 1 Also Applies.
3. This is a 1% Pyrometer. Unreasonable abuse, dropping, distorted or dirty sensor elements, can affect accuracy.
4. SPECIAL INSTRUMENTS WHICH USE SPECIAL SENSORS. See Instruction Book For Complete Details.
5. After using Sensors allow them to cool down and Replace Protective Plastic Covers to prevent sensor damage.

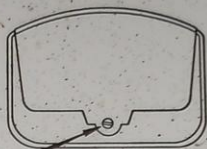

POINTER SETTING
AMBIENT SCREW

DO NOT TOUCH

SEE INSTRUCTION BOOK FOR FULL OPERATING DATA

