

PIPER
AUTOCONTROL II



HEADING LOCK



ROLL
PUSH TO ENGAGE



INSTRUCTIONS

TO ENGAGE: PUSH HEADING LOCK BUTTON TO "OUT" POSITION. CENTER TURN-TRIM KNOB. ENGAGE ROLL.

TO TURN: MOVE TURN-TRIM KNOB IN DESIRED DIRECTION.

FOR HEADING LOCK: SET D.G. WITH MAGNETIC COMPASS, PULL KNOB OUT. SELECT DESIRED HEADING, PUSH HEADING LOCK BUTTON TO "IN" POSITION. USE TURN-TRIM KNOB TO OBTAIN EXACT HEADING.

DISENGAGE: DURING TAKE-OFF AND LANDING.