



**OPERATING INSTRUCTIONS**  
CONSULT MANUAL FOR DETAILED INSTRUCTIONS

**PRELIMINARY CHECKS**

1. Check oil level in sight glass.
2. Check electrical connections and wiring.
3. Check for leaks.

**OPERATION**

1. Turn on control switch.
2. Set fan speed to desired.
3. Check for proper operation.
4. Check for proper operation of pressure control.
5. Check for any fault or shut off unit.


**STOP DOWN**

1. Turn off control switch.
2. Turn off fan motor.

**MAINTENANCE NOTES**

1. Check for proper operation of control switch.
2. Check for proper operation of fan motor.
3. Check for proper operation of pressure control.
4. Check for proper operation of fan motor.

**TRONAIR**

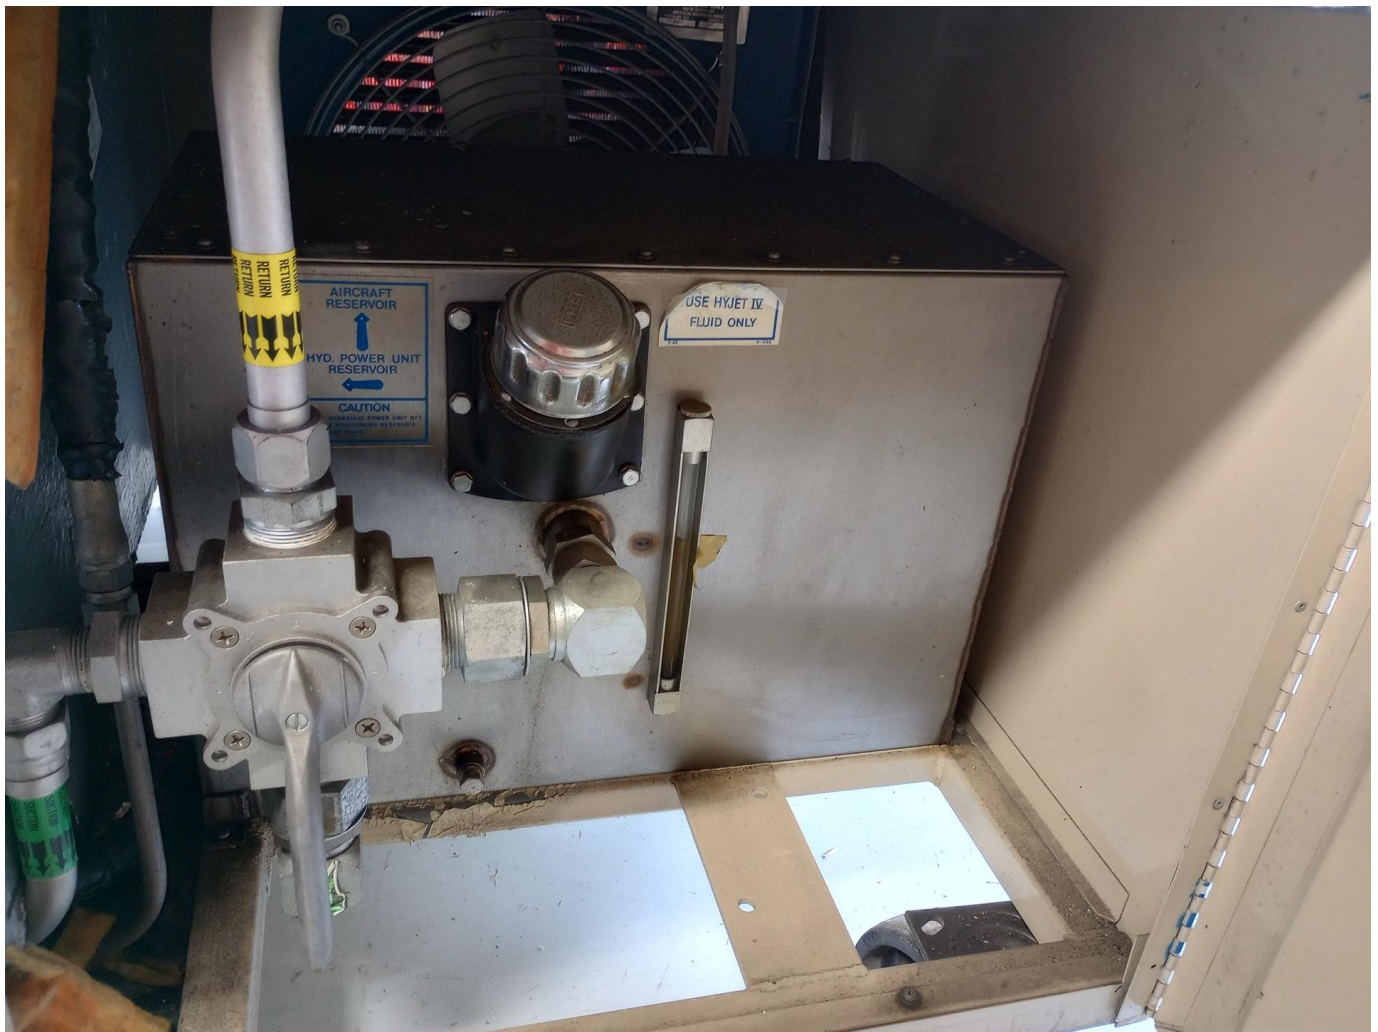





  
 OPEN CLOSE  
**BY-PASS VALVE**  
 CAUTION  
 FOR UNLOADING SYSTEM ONLY.  
 DO NOT USE FOR FLOW  
 OR PRESSURE CONTROL.



**RETURN OIL  
 TEMPERATURE**



**SYSTEM PRESSURE**